

Kor-N-Seal[®] II 206 Series Connector

Installation Instructions

Korband Installation (If not already installed)

- Install Korband into Connector by first fitting Wedge Expander into center of cutout provided, then installing remainder of Korband. Make sure that the Wedge Expander bolt head is located to the outside of Connector/inside of manhole.
- 2. Using pipe lubricant, lightly lube at least three to four sections of Korband by bending back rubber one section at a time. *Do not lube wedge area.*
- 3. Check to be sure Korband is properly located in Connector groove.

Connector Installation

- 1. Inspect the inside surface of the cored hole. If there is porosity or wire-to-concrete separation, use patching or hydraulic cement to smooth the surface.
- 2. Insert Connector Assembly into the hole properly positioning 1, 2, 3, or 4 Wedge Expander(s). Do not place wedge at bottom of hole.
- Position Connector so it is flush with the inner wall
 of the manhole at top and bottom of hole and/or
 assuring full contact of the Korband. Be sure the
 connector is square in the hole.
- 4. Tighten Wedge Expander equally using a torque wrench with a $\frac{1}{2}$ " drive and a $\frac{3}{8}$ " hex bit socket (p/n 80718).
- 5. Place plastic cap over end of bolt.
- 6. Retorquing prior to shipping is recommended but not required.

Recommended Torque Values:

Single Wedge: 75 ft. lbs.

Multiple Wedges: 45 - 75 ft. lbs.

Note: Multiple Wedges should be tightened incrementally to at least 45 foot pounds. Higher torque can be applied to one or more wedges since the wedges apply force linearly. Torque values can be different on each wedge.

Pipe Installation

- 1. Be sure sealing area of pipe is smooth and free of defects. Repair if needed.
- Center pipe in Connector opening.
 (Pipe must not rest on Connector Korband)
- 3. Position the Pipe Clamp(s) in the Connector's Pipe Clamp groove.
- 4. Tighten the Pipe Clamp screw to 60 inch pounds with a T-handle Torque Wrench, P/N 80090.


Note: On minimum pipe O.D. installations, lift the rubber up underneath the Pipe Clamp screw so that the Connector contacts the bottom surface of the pipe while the Pipe Clamp screw is being tightened. Application of pipe lubrication on the underside of the clamp will also help ensure that an even contraction of rubber is maintained throughout the clamping area.

Caution: Do not use impact wrench for installation.
All pipe stubs must be restrained.

Kor-N-Seal[®] II 206 Series Connector

Sizing Chart

P/N	Suggested Pipe O.D.		Hole Size Range		Connector Dimension			Pipe Clamps	
	Rai	nge		A	В	С	D	Qty	P/N
S206-18L	15.000	15.625	17.98	18.13	15.875	16	10.50	2	I-282
S206-20	15.625	17.000	19.98	20.13	17.875	17	10.50	2	I-282
S206-20L	17.000	17.625	19.90			18		2	I-306
S206-22	17.625	19.000	21.98	22.13	19.875	19 20	10.50	2	I-318
S206-22L	19.000	19.625	21.50					2	I-348
* S206-24A	18.000	19.500	23.98	24.13	21.875	18.75	10.00	4	I-180
S206-24 S206-24L	19.625 21.000	21.000 21.625	23.98	24.13	21.875	21 22	10.50	4	I-180
S206-26	21.625	23.000	26.00	26.20	23.875	23	10.50	4	I-190
S206-26L	23.000	23.625	20.00	20.20	23.613	24	10.50	4	I-218
S206-28	23.625	25.000	28.00	28.20	25.875	25	10.50	4	I-218
S206-28L	25.000	25.625	20.00	20.20	20.0.0	26		4	1210
S206-30	25.625	27.000	30.00	30.20	27.875	27	10.50	4	I-218
S206-30L	27.000	27.625	00.00	00.20	21.010	28			I-242
S206-32	27.625	29.000	32.00	32.20	29.875	29	10.50	4	1-242
S206-32L	29.000	29.625				30		4	
S206-34	29.625	31.000	34.00	34.20	31.875	31	10.50	4	I-258
S206-34L	31.000	31.625				32		4	
S206-36	31.625	33.000	36.00	36.20	33.875	33	10.50	4	I-282
S206-36L	33.000	33.625				34		4	
S206-38	33.625	35.000	38.00	38.20	35.875	35	10.50	4	I-282
S206-38L	35.000	35.625				36			I-306
S206-40 S206-40L	35.625 37.000	37.000 37.625	40.00	40.20	37.875	37 38	10.50	4	1-306
									1310
S206-42 S206-42L	37.625 39.000	39.000 39.625	42.00	42.20	39.875	39 40	10.50	4	I-318
									I-348
S206-44 S206-44L	39.625 41.000	41.000 41.625	44.00	44.20	41.875	41 42	10.50	4	I-348
	-						10.50	4	1-348
S206-46 S206-46L		43.000 43.625	46.00	46.20	43.875	43 44		4	1-242
S206-48	43.625	45.000	48.00	48.20	45.875	45	10.50	6	1-242
S206-48L	45.000	45.625				46		6	1-258
S206-50	45.000	45.625		50.25	47.250	46		6	
S206-50L	45.625	47.000	50.00			47	10.50	6	80667
S206-52	47.000	47.625	50.00	====	10.055	48	40.50	6	
S206-52L	47.625	49.000	52.00	52.25	49.250	49	10.50	6	80667
S206-54	49.000	49.625	E4.00	E4.05	E1 0E0	50	10.50	6	9060
S206-54L	49.625	51.000	54.00	54.25	51.250	51	10.50	6	8066

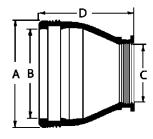

- Double Wedge is available for 22 to 48 inch sizes, but .500 inches must be subtracted from the "B" dimension thus limiting your pipe O.D. range by .500 inches. The Double Wedge is only available on the "L" connectors.
- Special sizes quoted upon request.
- 50 inch (or larger) Connectors have 2 Wedges or more.
- Using Corrugated Pipe: Adapters are required when using Corrugated Pipe. Refer to the Corrugated Pipe Adapter Data Sheet for details.



