


# ML-13-NCR

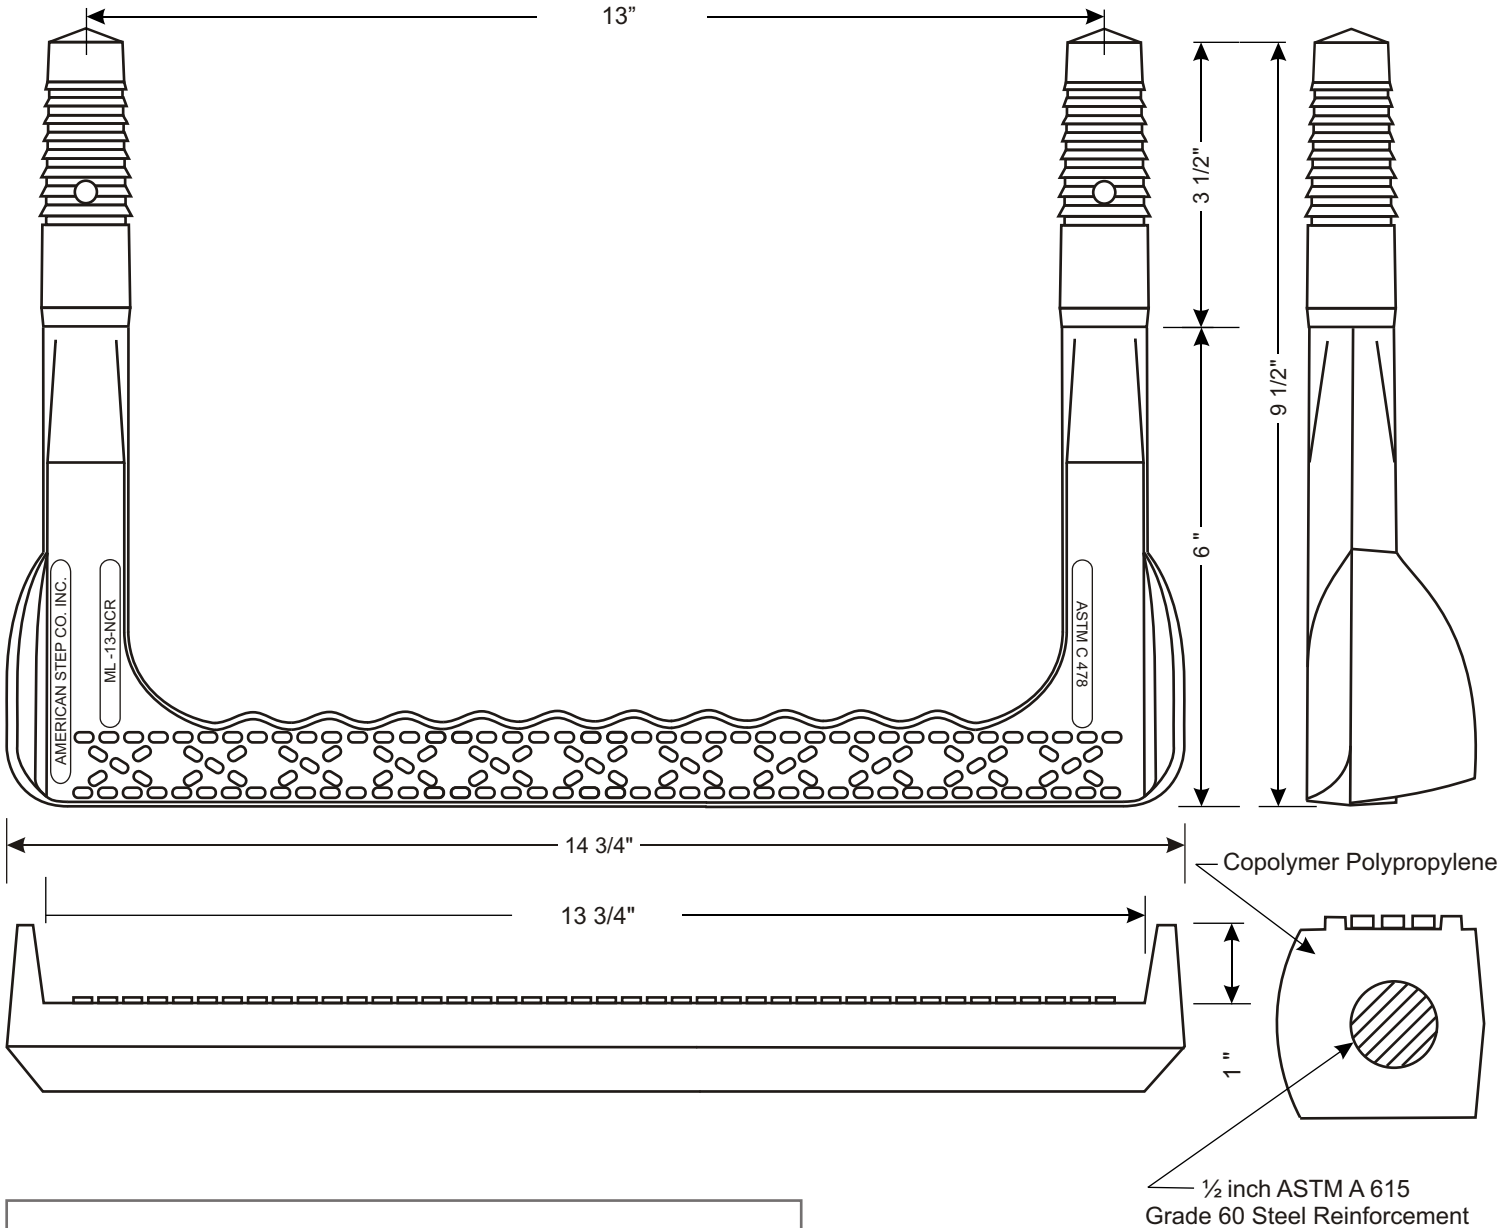

## ML-13-NCR

Mechanical Lock Installation Methods  
Minimum Concrete Strength Must Be 3000 psi.

### **Preformed Holes**

Two preformed holes on 13" centers  
Holes must be parallel  
Diameter of holes are 1.1" tapering to 7/8" in 3 1/2" of depth

### **Drilled Holes**

Drill two 1" holes on 13" centers with a minimum depth of 3 3/4"  
Use 1" masonry bit for drilling.  
Holes must be parallel.

Drive step with sledge hammer until both legs are completely seated

*This step meets or exceeds ASTM C 478 and OSHA Standards  
when properly installed.*



American Step Company, Inc.  
P.O. Box 137  
830 East Broadway  
Griffin, GA 30224-0137

800-988-STEP  
770-467-9844 (OFFICE)  
770-467-8011 (FAX)